



## Special Functions Coverage By Vehicle Model

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
Range Rover Sport	2005 - 2009	Powertrain control module	Adaption clear
		Powertrain control module	Idle speed test
		Powertrain control module	Purge valve self test
		Powertrain control module	Diesel particulate filter dynamic regeneration
		Powertrain control module	Diesel particulate filter replacement
		Powertrain control module	Oil service counter reset
		Powertrain control module	Fuel prime routine
		Transmission control module	Adaption clear
		Supplemental Inflatable Restraint System	Seat cushion replacement
		Supplemental Inflatable Restraint System	Third button configuration
		Instrument cluster control module	Service interval reset
		Instrument cluster control module	Vehicle reset
		Ride level control module	Air suspension height calibration
		Ride level control module	Air suspension deflation
		Ride level control module	Air suspension enable
		Ride level control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Ride level control module	Suspension tight tolerance control
		Ride level control module	Set/un - set air suspension geometry set - up
		Ride level control module	Ride level control module inflation (showroom)
		Body control module	Rain sensor initialisation
		Body control module	Sliding roof module initialisation
		Body control module	Driver's memory seat calibration
		Body control module	Steering column calibration
		Vehicle dynamics control module	Brake bleed
		Steering angle sensor module	Steering wheel angle sensor calibration
		Tire pressure monitor module	Tire pressure sensor replacement
		Tire pressure monitor module	Tire pressure monitor confirmation application
2010 - 2011	2010 - 2011	Parking brake control module	Drive the parking brake to the mounting position
		Parking brake control module	Drive the parking brake to the latching position
		Parking brake control module	Longitudinal accelerometer sensor calibration
		Parking brake control module	Parking brake unjam procedure
		Parking assist control module	Front parking aid sensors 'Auto - On' activation
		Auxiliary heater control module	Auxiliary heater fuel delivery test
		Auxiliary heater control module	Auxiliary heater priming routine
		Auxiliary heater control module	Auxiliary heater activation test
		Transfer case control module	Stepper motor replacement
		Transfer case control module	Absolute position sensor replacement
		Transfer case control module	Solenoid replacement
		Powertrain control module	Diesel particulate filter dynamic regeneration
		Powertrain control module	Diesel particulate filter replacement
		Powertrain control module	Oil service counter reset
		Powertrain control module	Injector replacement
		Powertrain control module	Reset water in fuel detection
		Powertrain control module	Security - Keyfob remote functionality
		Powertrain control module	Turbine shut - off valve
		Powertrain control module	Exhaust gas recirculation valve
		Powertrain control module	Oxygen sensor
		Powertrain control module	Oxidation catalyst
		Powertrain control module	Throttle valve actuator
		Powertrain control module	Adaption clear

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Transmission control module	Adaption clear
		Anti-lock Braking System	Brake bleed
		Anti-lock Braking System	Yaw Rate sensor calibration
		Instrument cluster control module	Service interval reset
		Ride level control module	Air suspension height calibration
		Ride level control module	Air suspension deflation
		Ride level control module	Air suspension enable
		Ride level control module	Set/un - set air suspension manufacturing/freeze mode
		Ride level control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Body control module	Tire pressure sensor replacement
		Body control module	Tire pressure monitor confirmation application
		Body control module	Battery replacement
		Body control module	Sunroof calibration
		Body control module	Valet mode reset
		Heating ventilation and air conditioning control module	Evaporator and heater test
		Heating ventilation and air conditioning control module	Actuators end stop detection
		Heating ventilation and air conditioning control module	Stepper motor initialisation
		Vehicle dynamics control module	Brake bleed
		Steering angle sensor module	Steering wheel angle sensor calibration
		Tire pressure monitor module	Tire pressure sensor replacement
		Tire pressure monitor module	Tire pressure monitor confirmation application
		Parking brake control module	Drive the parking brake to the mounting position
		Parking brake control module	Drive the parking brake to the latching position
		Parking brake control module	Longitudinal accelerometer sensor calibration
		Parking brake control module	Parking brake unjam procedure
		Auxiliary heater control module	Auxiliary heater fuel delivery test
		Auxiliary heater control module	Auxiliary heater priming routine
		Auxiliary heater control module	Auxiliary heater activation test
		Driver's door module	Driver's door window glass calibration
		Driver's seat module	Driver's seat calibration
		Driver's seat module	Seat entry/exit enable
		Passenger's door module	Passenger's door window glass calibration
		Adaptive damping control module	Build mode
		Rear differential control module	Control module calibration
		Restraints occupant classification system module	Seat cushion replacement
		Headlamp Control Module	Headlamp control module system calibration
2012 - 2013		Powertrain control module	Diesel particulate filter dynamic regeneration
		Powertrain control module	Diesel particulate filter replacement
		Powertrain control module	Oil service counter reset
		Powertrain control module	Throttle valve actuator
		Powertrain control module	Reset water in fuel detection
		Powertrain control module	Rest of world - Service interval options
		Transmission control module	Adaption clear
		Anti-lock Braking System	Brake bleed
		Supplemental Inflatable Restraint System	Restraints build mode
		Instrument cluster control module	Service interval reset
		Instrument cluster control module	Vehicle reset
		Ride level control module	Air suspension height calibration
		Ride level control module	Air suspension deflation

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Ride level control module	Air suspension enable
		Ride level control module	Set/un - set air suspension manufacturing/freeze mode
		Ride level control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Ride level control module	Set/un - set air suspension geometry set - up
		Body control module	Tire pressure sensor replacement
		Body control module	Tire pressure monitor confirmation application
		Body control module	Steering column calibration
		Body control module	Tire pressure monitor sensor identification display
		Body control module	Tire pressure monitoring tire pressure sensor test
		Vehicle dynamics control module	Brake bleed
		Steering angle sensor module	Steering wheel angle sensor calibration
		Tire pressure monitor module	Tire pressure sensor replacement
		Tire pressure monitor module	Tire pressure monitor confirmation application
		Parking brake control module	Drive the parking brake to the mounting position
		Parking brake control module	Drive the parking brake to the latching position
		Parking brake control module	Longitudinal accelerometer sensor calibration
		Parking brake control module	Parking brake unjam procedure
		Auxiliary heater control module	Auxiliary heater activation test
		Passenger's door module	Passenger's door window glass calibration
		Transfer case control module	Absolute position sensor replacement
		Adaptive damping control module	Build mode
		Speed control module	Speed control alignment
		Restraints occupant classification system module	Seats - Seat cover replacement
		Headlamp Control Module	Headlamp control module system calibration
		Keyless vehicle module	Check all antennas
		Keyless vehicle module	Check passive keys enabled
		Audio amplifier module	DVD region counter reset
		Audio amplifier module	Calibrate dynamic volume control
		Rear gate/trunk module	Tailgate/trunk calibration
		Image processing module B	Camera auto learn routine
		Powertrain control module	Adaption clear
		Powertrain control module	Idle speed - Adjustment
		Powertrain control module	Service history data
		Vehicle dynamics control module	Brake bleed
		Parking brake control module	Drive the parking brake to the mounting position
		Parking brake control module	Drive the parking brake to the latching position
		Parking brake control module	Parking brake unjam procedure
2014 - 2015		Powertrain control module	Service interval reset
		Powertrain control module	Adaption clear
		Powertrain control module	Fuel prime routine
		Powertrain control module	Throttle valve actuator replacement
		Powertrain control module	Oil service counter reset
		Powertrain control module	Injector replacement
		Powertrain control module	Diesel fueling adaption re - initialization
		Powertrain control module	Diesel particulate filter differential pressure sensor replacement
		Powertrain control module	Diesel particulate filter replacement
		Powertrain control module	Exhaust gas recirculation valve
		Powertrain control module	Throttle valve actuator
		Powertrain control module	Oxygen sensor
		Powertrain control module	Oxidation catalyst
		Powertrain control module	Reset water in fuel detection

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Powertrain control module	Turbine shut - off valve
		Powertrain control module	Rest of world - Service interval options
		Powertrain control module	Fuel Lift Pump
		Supplemental Inflatable Restraint System	Restraints build mode
		Instrument cluster control module	Vehicle reset
		Ride level control module	Set/un - set air suspension geometry set - up
		Body control module	Verify Keys
		Body control module	Sunroof calibration
		Body control module	Tire pressure sensor replacement
		Body control module	Valet mode reset
		Body control module	Steering column calibration
		Body control module	Tire pressure monitor sensor identification display
		Body control module	Fuel pump supply - Enable/disable
		Body control module	Transportation mode
		Auxiliary heater control module	Air suspension deflation
		Auxiliary heater control module	Air suspension enable
		Auxiliary heater control module	Height recalibration
		Auxiliary heater control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Heating ventilation and air conditioning control module	Reset compressor protection counter
		Heating ventilation and air conditioning control module	Seat climate control module calibration
		Heating ventilation and air conditioning control module	Actuators end stop detection
		Heating ventilation and air conditioning control module	Stepper motor initialisation
		Vehicle dynamics control module	Brake bleed
		Tire pressure monitor module	Tire pressure sensor replacement
		Tire pressure monitor module	Tire pressure monitor confirmation application
		Parking brake control module	Longitudinal accelerometer calibration
		Parking brake control module	Parking brake pad replacement - Release to service position
		Parking brake control module	Parking brake pad replacement - Exit maintenance mode application
		Parking brake control module	Parking brake activation
		Passenger's seat module	Power steering soft - lock end stops reset routine
		Parking assist control module	Parking aid switch-Enable(disable)
		Auxiliary heater control module	Auxiliary heater priming routine
		Gateway module	Quiescent current control module internal check
		Gateway module	Battery replacement
		Driver's door module	Driver's door window glass calibration
		Driver's seat module	Driver's seat calibration
		Passenger's door module	Passenger's door window glass calibration
		Passenger's seat module	Passenger's seat calibration
		Adaptive damping control module	Build mode
		Speed control module	Speed control alignment
		Rear differential control module	Control module calibration
		Running board control module	Service mode enabled
		Running board control module	Service mode disabled
		Restraints occupant classification system module	Seats - Seat cover replacement
		Keyless vehicle module	Recover programmed keys
		Keyless vehicle module	Check all antennas
		Keyless vehicle module	Check passive keys enabled

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
Range Rover 4.0 / 4.6 P38	1995 - 2001	Audio amplifier module	Calibrate dynamic volume control
		Rear gate/trunk module	Tailgate/trunk calibration
		Image processing module B	Camera auto learn routine
		Audio front control module	Navigation reset
Range Rover 4.0 / 4.6 P38	1995 - 2001	Anti-lock Braking System	ECU Replacement
		Anti-lock Braking System	Brake Bleeding
		Air Suspension	Transport Mode
		Air Suspension	High Lock Mode
		Air Suspension	Adjust Heights : Raise Fully
		Air Suspension	Adjust Heights : Lower Fully
		Air Suspension	Adjust Heights : Adjust To High Profile
		Air Suspension	Adjust Heights : Adjust To Standard
		Air Suspension	Adjust Heights : Adjust To Low Profile
		Air Suspension	Adjust Heights : Adjust To Access
		Air Suspension	Calibrate
		Air Suspension	Deflate System
		Body Control	Odometer Update
		Climate Control	Perform Servo Tune
		Climate Control	Replace ECU
		Cruise Control	Tune Information
		Cruise Control	Last Shut Off
		Engine(M5 2.1 EMS)	Immobilisation Reprogram
		Engine(M5 2.1 EMS)	LEV1 1.0mm Evap Leak Test
		Engine(M5 2.1 EMS)	LEV2 0.5mm Leak Tracing
		Engine(M5 2.1 EMS)	Reset Adoptions
		Engine(M5 2.1 EMS)	Repair Validation
		Engine(M5 2.1 EMS)	Open Loop Tune
		Engine(M5 2.1 EMS)	Programming History
		Engine(M5 2.1 EMS)	ECU Checks & Renewal
		Engine(M5 2.1 EMS)	Non Start Diagnostics
		Transmission	Reset Adoptions
		Transmission	Read VIN
		Transmission	Program VIN
		Transmission	Read Tune Select
		Transmission	Program Tune Select
Range Rover Full Size L322	2002 - 2005	Anti-lock Braking System	ECU Renewal
		Anti-lock Braking System	Brake Bleeding
		Anti-lock Braking System	Steering Angle Calibration
		Anti-lock Braking System	Steering Angle Sensor Renewal
		Anti-lock Braking System	Brake Assist Sensitivity
		Air Suspension	ECU Renewal
		Air Suspension	Height Recalibration
		Air Suspension	Deflation : Front Left Bellow Valve
		Air Suspension	Deflation : Front Right Bellow Valve
		Air Suspension	Deflation : Rear Left Bellow Valve
		Air Suspension	Deflation : Rear Right Bellow Valve
		Air Suspension	Deflation : Exhaust Valve
		Air Suspension	Inflation
		Air Suspension	Headlight Calibration
		Airbag	ECU Renewal
		Alarms/Security	ECU Renewal
		Alarms/Security	Immobilisation Learn (Synchronise Immobilisation)
		Alarms/Security	Identify Key

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Alarms/Security	Key Store
		Body Control	ECU Renewal
		Body Control	Identify Keys
		Body Control	ECU Code
		Body Control	Rain Sensor Reset
		Body Control	Initialise Sunroof
		Body Control	Information Memory
		Engine(ME7.2 EMS)	ECU Checks And Renewal
		Engine(ME7.2 EMS)	Immobilisation Learn
		Engine(ME7.2 EMS)	Reset Adoptions
		Engine(ME7.2 EMS)	Idle CO Adjust
		Engine(ME7.2 EMS)	Erase Driver Demand Fault
		Engine(ME7.2 EMS)	Secondary Air Test
		Engine(ME7.2 EMS)	Purge Valve Test
		Engine(ME7.2 EMS)	VCC Test 1
		Engine(ME7.2 EMS)	Idle Speed Test
		Engine(TD6)	ECU Checks & Renewal
		Engine(TD6)	Immobilisation Learn
		Engine(TD6)	Idle Speed
		Engine(TD6)	HFM Sensor
		Engine(TD6)	Reset Adoptions
		Engine(TD6)	Injector Grade Compensation
		Fuel Burning Heater	ECU Renewal
		Fuel Burning Heater	Prime System
		Heater electron ventilation air conditioning	ECU Renewal
		Instrumentation	ECU Renewal
		Instrumentation	Pack Language
		Instrumentation	Service Reset
		Exterior Lighting	ECU Renewal
		Information Systems	ECU Renewal
		Parking Aid	ECU Renewal
		Transfer Box	ECU Renewal
		Transfer Box	Calibration
		Transmission	ECU Renewal
		Transmission	Reset Adoptions
2006		Powertrain control module	Adaption clear
		Powertrain control module	Purge valve self test
		Powertrain control module	OBDII readiness tests
		Instrument cluster control module	Service interval reset
		Ride level control module	Air suspension height calibration
		Ride level control module	Air suspension deflation
		Ride level control module	Air suspension enable
		Ride level control module	Set/un - set air suspension manufacturing/freeze mode
		Ride level control module	Set/un - set air suspension geometry set - up
		Ride level control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Ride level control module	Suspension tight tolerance control
		Body control module	Sliding roof module initialisation
		Tire pressure monitor module	Tire pressure sensor replacement
		Tire pressure monitor module	Tire pressure monitor confirmation application
		Parking brake control module	Drive the parking brake to the mounting position
		Parking brake control module	Drive the parking brake to the latching position
		Parking brake control module	Longitudinal accelerometer sensor calibration
		Parking brake control module	Parking brake unjam procedure

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Transfer case control module	Stepper motor replacement
		Transfer case control module	Solenoid replacement
		Rain Sensor	Rain sensor initialisation
		Rain Sensor	Rain sensor windshield setup
		Running board control module	Service mode enabled
		Running board control module	Service mode disabled
		Restraints occupant classification system module	Seat cushion replacement
		Transmission control module	Adaption clear
		Vehicle dynamics control module	Brake bleed
		Steering angle sensor module	Steering wheel angle sensor calibration
2007 - 2009		Powertrain control module	Adaption clear
		Powertrain control module	Idle speed test
		Powertrain control module	Purge valve self test
		Powertrain control module	OBDII readiness tests
		Powertrain control module	Diesel particulate filter dynamic regeneration
		Powertrain control module	Diesel particulate filter replacement
		Powertrain control module	Fuel Prime Routine
		Transmission control module	Adaption clear
		Instrument cluster control module	Service interval reset
		Ride level control module	Air suspension height calibration
		Ride level control module	Air suspension deflation
		Ride level control module	Air suspension enable
		Ride level control module	Set/un - set air suspension manufacturing/freeze mode
		Ride level control module	Set/un - set air suspension geometry set - up
		Ride level control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Ride level control module	Suspension tight tolerance control
		Body control module	Sliding roof module initialisation
		Vehicle dynamics control module	Brake bleed
		Steering angle sensor module	Steering wheel angle sensor calibration
		Tire pressure monitor module	Tire pressure sensor replacement
		Tire pressure monitor module	Tire pressure monitor confirmation application
		Parking brake control module	Drive the parking brake to the mounting position
		Parking brake control module	Drive the parking brake to the latching position
		Parking brake control module	Longitudinal accelerometer sensor calibration
		Parking brake control module	Parking brake unjam procedure
		Transfer case control module	Stepper motor replacement
		Transfer case control module	Solenoid replacement
		Rain Sensor	Rain sensor initialisation
		Rain Sensor	Rain sensor windshield setup
		Running board control module	Service mode enabled
		Running board control module	Service mode disabled
		Restraints occupant classification system module	Seat cushion replacement
2010 - 2012		Powertrain control module	Diesel particulate filter dynamic regeneration
		Powertrain control module	Diesel particulate filter replacement
		Powertrain control module	Oil service counter reset
		Powertrain control module	Adaption clear
		Powertrain control module	Idle speed - Adjustment
		Powertrain control module	Oil service counter reset
		Powertrain control module	Adaption clear
		Powertrain control module	Idle speed - Adjustment
		Transmission control module	Adaption clear

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Instrument cluster control module	Service interval reset
		Ride level control module	Air suspension height calibration
		Ride level control module	Air suspension deflation
		Ride level control module	Air suspension enable
		Ride level control module	Set/un - set air suspension manufacturing/freeze mode
		Ride level control module	Build mode
		Ride level control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Body control module	Tire pressure sensor replacement
		Body control module	Tire pressure monitor confirmation application
		Body control module	Battery replacement
		Body control module	Sunroof calibration
		Body control module	Valet mode reset
		Heating ventilation and air conditioning control module	Evaporator and heater test
		Vehicle dynamics control module	Brake bleed
		Vehicle dynamics control module	Yaw Rate sensor calibration
		Steering angle sensor module	Steering wheel angle sensor calibration
		Tire pressure monitor module	Tire pressure sensor replacement
		Tire pressure monitor module	Tire pressure monitor confirmation application
		Parking brake control module	Drive the parking brake to the mounting position
		Parking brake control module	Drive the parking brake to the latching position
		Parking brake control module	Longitudinal accelerometer sensor calibration
		Parking brake control module	Parking brake unjam procedure
		Driver's door module	Driver's door window glass calibration
		Driver's seat module	Driver's seat calibration
		Passenger's door module	Passenger's door window glass calibration
		Rain Sensor	Rain sensor initialisation
		Rain Sensor	Rain sensor windshield setup
		Running board control module	Service mode enabled
		Running board control module	Service mode disabled
		Restraints occupant classification system module	Seat cushion replacement
		Restraints occupant classification system module	Seat cushion replacement
Range Rover Full Size L405	2013	Powertrain control module	Fuel prime routine
		Powertrain control module	Adaption status
		Powertrain control module	Throttle valve actuator replacement
		Powertrain control module	Diesel particulate filter replacement
		Powertrain control module	Exhaust gas recirculation valve
		Powertrain control module	Throttle valve actuator
		Powertrain control module	Reset water in fuel detection
		Powertrain control module	Rest of world - Service interval options
		Powertrain control module	Turbine shut - off valve
		Powertrain control module	Injector replacement
		Powertrain control module	Fuel Lift Pump
		Powertrain control module	Oxygen sensor
		Powertrain control module	Oxidation catalyst
		Powertrain control module	Service interval reset
		Powertrain control module	Diesel particulate filter dynamic regeneration
		Transmission control module	Adaption clear
		Supplemental Inflatable Restraint System	Restraints build mode
		Instrument cluster control module	Vehicle reset

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Ride level control module	Air suspension height calibration
		Ride level control module	Air suspension deflation
		Ride level control module	Air suspension enable
		Ride level control module	Set/un - set air suspension manufacturing/freeze mode
		Ride level control module	Build mode
		Ride level control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Body control module	Tire pressure sensor replacement
		Body control module	Tire pressure monitor confirmation application
		Body control module	Steering column calibration
		Body control module	Tire pressure monitor sensor identification display
		Body control module	Fuel pump supply - Enable/disable
		Body control module	Sunroof calibration
		Body control module	Valet mode reset
		Body control module	Transportation mode
		Body control module	Verify Keys
		Body control module	Tire pressure monitoring tire pressure sensor test
		Auxiliary heater control module	Air suspension height calibration
		Auxiliary heater control module	Air suspension deflation
		Auxiliary heater control module	Air suspension enable
		Auxiliary heater control module	Set/un - set air suspension manufacturing/freeze mode
		Auxiliary heater control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Auxiliary heater control module	Set/un - set air suspension geometry set - up
		Heating ventilation and air conditioning control module	Actuators end stop detection
		Heating ventilation and air conditioning control module	Stepper motor initialisation
		Heating ventilation and air conditioning control module	Auxiliary heater priming routine
		Heating ventilation and air conditioning control module	Reset compressor protection counter
		Vehicle dynamics control module	Brake bleed
		Tire pressure monitor module	Tire pressure sensor replacement
		Tire pressure monitor module	Tire pressure monitor confirmation application
		Parking brake control module	Parking brake pad replacement - Release to service position
		Parking brake control module	Parking brake pad replacement - Exit maintenance mode application
		Parking brake control module	Parking brake activation
		Parking brake control module	Longitudinal accelerometer calibration
		Parking brake control module	Brake caliper replacement assembly test
		Passenger's seat module	Power steering soft - lock end stops reset routine
		Gateway module	Test dual battery system
		Gateway module	Battery replacement
		Gateway module	Quiescent current control module internal check
		Gateway module	Verify secondary battery charging
		Driver's door module	Driver's door window glass calibration
		Driver's seat module	Driver's seat calibration
		Passenger's door module	Passenger's door window glass calibration
		Passenger's seat module	Passenger's seat calibration
		Transfer case control module	Absolute position sensor replacement
		Transfer case control module	Motor replacement

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Speed control module	Speed control alignment
		Rain Sensor	Rain sensor initialisation
		Rain Sensor	Rain sensor windshield setup
		Running board control module	Service mode enabled
		Running board control module	Service mode disabled
		Restraints occupant classification system module	Seats - Seat cover replacement
		Headlamp Control Module	Headlamp control module system calibration
		Keyless vehicle module	Check all antennas
		Keyless vehicle module	Check passive keys enabled
		Keyless vehicle module	Keyless latch configuration
		Audio amplifier module	DVD region counter reset
		Audio amplifier module	Calibrate dynamic volume control
		Image processing module B	Camera auto learn routine
		Audio front control module	Navigation reset
		Side object detection control module - Left	Side object detection mode history
2014 - 2015		Powertrain control module	Adaption clear
		Powertrain control module	Fuel prime routine
		Powertrain control module	Oil service counter reset
		Powertrain control module	Throttle valve actuator replacement
		Powertrain control module	Injector replacement
		Powertrain control module	Diesel fueling adaption re - initialization
		Powertrain control module	Diesel particulate filter differential pressure sensor replacement
		Powertrain control module	Diesel particulate filter replacement
		Powertrain control module	Exhaust gas recirculation valve
		Powertrain control module	Throttle valve actuator
		Powertrain control module	Oxygen sensor
		Powertrain control module	Oxidation catalyst
		Powertrain control module	Reset water in fuel detection
		Powertrain control module	Turbine shut - off valve
		Powertrain control module	Fuel Lift Pump
		Powertrain control module	Injector replacement
		Supplemental Inflatable Restraint System	Restraints build mode
		Instrument cluster control module	Vehicle reset
		Ride level control module	Set/un - set air suspension geometry set - up
		Body control module	Sunroof calibration
		Body control module	Tire pressure sensor replacement
		Body control module	Valet mode reset
		Body control module	Steering column calibration
		Body control module	Tire pressure monitor sensor identification display
		Body control module	Fuel pump supply - Enable/disable
		Body control module	Transportation mode
		Body control module	Verify Keys
		Body control module	Calf rest calibration
		Auxiliary heater control module	Air suspension deflation
		Auxiliary heater control module	Air suspension enable
		Auxiliary heater control module	Set/un - set air suspension manufacturing/freeze mode
		Auxiliary heater control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Heating ventilation and air conditioning control module	Actuators end stop detection
		Heating ventilation and air conditioning control module	Reset compressor protection counter

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Heating ventilation and air conditioning control module	Seat climate control module calibration
		Vehicle dynamics control module	Brake bleed
		Tire pressure monitor module	Tire pressure sensor replacement
		Tire pressure monitor module	Tire pressure monitor confirmation application
		Parking brake control module	Longitudinal accelerometer calibration
		Parking brake control module	Parking brake pad replacement - Release to service position
		Parking brake control module	Parking brake pad replacement - Exit maintenance mode application
		Parking brake control module	Parking brake activation
		Passenger's seat module	Power steering soft - lock end stops reset routine
		Parking assist control module	Parking aid switch-Enable(disable)
		Gateway module	Quiescent current control module internal check
		Driver's seat module	Driver's seat calibration
		Passenger's seat module	Passenger's seat calibration
		Speed control module	Speed control alignment
		Rear differential control module	Control module calibration
		Rain Sensor	Rain sensor initialisation
		Rain Sensor	Rain sensor windshield setup
		Running board control module	Service mode enabled
		Running board control module	Service mode disabled
		Restraints occupant classification system module	Seats - Seat cover replacement
		Headlamp Control Module	Headlamp control module system calibration
		Keyless vehicle module	Check all antennas
		Keyless vehicle module	Recover programmed keys
		Gateway module	Battery replacement
		Audio amplifier module	DVD region counter reset
		Rear gate/trunk module	Tailgate/trunk calibration
		Audio front control module	Navigation reset
Discovery 1	1996 - 1999	ABS (WABCO C TYPE)	System Test
		ABS (WABCO C TYPE)	Test Brake Switch
		ABS (WABCO C TYPE)	Test Warning Lamps
		ABS (WABCO C TYPE)	Test Left Front
		ABS (WABCO C TYPE)	Test Left Rear
		ABS (WABCO C TYPE)	Test Right Front
		ABS (WABCO C TYPE)	Test Right Rear
		ABS (WABCO C TYPE)	Brake Bleeding
		Anti-lock Braking System	Read ECU Configuration
		Alarms/Security (LUCAS 10AS ALARM)	Plip Programming
		Alarms/Security (LUCAS 10AS ALARM)	Horn Test
		Alarms/Security (LUCAS 10AS ALARM)	Alarm LED
		Alarms/Security (LUCAS 10AS ALARM)	Ignition Switch
		Alarms/Security (LUCAS 10AS ALARM)	Volumetric Sensor
		Alarms/Security (LUCAS 10AS ALARM)	Door Key
		Alarms/Security (LUCAS 10AS ALARM)	Central Door Locking
		Alarms/Security (LUCAS 10AS ALARM)	Sill Button
		Alarms/Security (LUCAS 10AS ALARM)	Door Switch
		Alarms/Security (LUCAS 10AS ALARM)	Bonnet Switch
		Alarms/Security (LUCAS 10AS ALARM)	Immobilisation Lamp
		Alarms/Security (LUCAS 10AS ALARM)	Hazard Lights
		Alarms/Security (LUCAS 10AS ALARM)	Courtesy Lights
		Alarms/Security (LUCAS 10AS ALARM)	Friendly Passive
		Alarms/Security (LUCAS 10AS ALARM)	Read Key Access Code

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Engine (Lucas GEMS EMS)	Test Base Idle
		Engine (Lucas GEMS EMS)	Open Loop Tuning
		Engine (Lucas GEMS EMS)	Reset Adaptons
		Engine (Lucas GEMS EMS)	Set Vehicle Type
		Engine (Lucas GEMS EMS)	Reset Closed Throttle
		Engine(MEMS 1.9)	Immobilisation Reprogram
		Engine(MEMS 1.9)	Service Ignition Offset
		Engine(MEMS 1.9)	Service Idle Speed Offset
		Engine(MEMS 1.9)	Reset Adaptons
Discovery Series 2	1999 - 2004	Anti-lock Braking System	Brake Bleeding
		Anti-lock Braking System	ECU Replacement
		Anti-lock Braking System	Differential Lock
		Anti-lock Braking System	Suspension Configuration
		Anti-lock Braking System	SLS Transportation
		Anti-lock Braking System	SLS Calibration
		Anti-lock Braking System	SLS Deflation
		Active Cornering Enhancement	New ECU
		Active Cornering Enhancement	Calibrate ACE System
		Active Cornering Enhancement	Bleed System
		Airbag	Program VIN
		Body Control	EKA Display
		Body Control	Plip Programming
		Body Control	Mobilisation Learn
		Body Control	Alarm Triggers
		Cruise Control	Tune Information
		Cruise Control	Last Shut Off
		Engine(M5 2.1 EMS)	Immobilisation Reprogram
		Engine(M5 2.1 EMS)	LEV1 1.0mm Evap Leak Test
		Engine(M5 2.1 EMS)	LEV2 0.5mm Leak Tracing
		Engine(M5 2.1 EMS)	Reset Adaptons
		Engine(M5 2.1 EMS)	Repair Validation
		Engine(M5 2.1 EMS)	Open Loop Tune
		Engine(M5 2.1 EMS)	Programming History
		Engine(M5 2.1 EMS)	ECU Checks & Renewal
		Engine(M5 2.1 EMS)	Non Start Diagnostics
		Engine(M5 2.1 EMS)	NAS/EU3 OBDII Support
		Engine(TD5)	Security Status
		Engine(TD5)	Read/Set Injector Codes
		Engine(TD5)	Security Reprogram
		Engine(TD5)	ECM Checks & Renewal
		Engine(TD5)	Set 2/3 Track Pedal Pot
LR3	2005 - 2009	Fuel Burning Heater	Set CO2 Level
		Fuel Burning Heater	Prime System
		Transmission	Reset Adaptons
		Transmission	Read VIN
		Transmission	Program VIN
		Anti-lock Braking System	Brake Bleeding

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Powertrain control module	Diesel particulate filter replacement
		Transmission control module	Adaption clear
		Supplemental Inflatable Restraint System	Seats - Seat cover replacement
		Instrument cluster control module	Service interval reset
		Instrument cluster control module	Vehicle reset
		Ride level control module	Air suspension height calibration
		Ride level control module	Air suspension deflation
		Ride level control module	Air suspension enable
		Ride level control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Ride level control module	Suspension tight tolerance control
		Ride level control module	Set/un - set air suspension geometry set - up
		Ride level control module	Ride level control module inflation (showroom)
		Body control module	Rain sensor initialisation
		Body control module	Sliding roof module initialisation
		Body control module	Driver's memory seat calibration
		Vehicle dynamics control module	Brake bleed
		Steering angle sensor module	Steering wheel angle sensor calibration
		Tire pressure monitor module	Tire pressure sensor replacement
		Tire pressure monitor module	Tire pressure monitor confirmation application
		Parking brake control module	Drive the parking brake to the mounting position
		Parking brake control module	Drive the parking brake to the latching position
		Parking brake control module	Longitudinal accelerometer sensor calibration
		Parking brake control module	Parking brake unjam procedure
		Parking assist control module	Front parking aid sensors 'Auto - On' activation
		Auxiliary heater control module	Auxiliary heater fuel delivery test
		Auxiliary heater control module	Auxiliary heater priming routine
		Transfer case control module	Stepper motor replacement
		Transfer case control module	Solenoid replacement
		Transfer case control module	Adaption status
		Transfer case control module	Absolute position sensor replacement
LR4	2010 - 2011	Powertrain control module	Oil service counter reset
		Powertrain control module	Injector replacement
		Powertrain control module	Exhaust gas recirculation valve
		Powertrain control module	Throttle valve actuator
		Powertrain control module	Oxygen sensor
		Powertrain control module	Oxidation catalyst
		Powertrain control module	Reset water in fuel detection
		Powertrain control module	Turbine shut - off valve
		Powertrain control module	Fuel prime routine
		Powertrain control module	Service interval reset
		Powertrain control module	Adaption clear
		Powertrain control module	Rest of world - Service interval options
		Powertrain control module	Diesel particulate filter dynamic regeneration
		Powertrain control module	Diesel particulate filter replacement
		Transmission control module	Adaption clear
		Anti-lock Braking System	Brake bleed
		Anti-lock Braking System	Yaw Rate sensor calibration
		Instrument cluster control module	Service interval reset
		Ride level control module	Air suspension height calibration
		Ride level control module	Air suspension deflation
		Ride level control module	Air suspension enable
		Ride level control module	Set/un - set air suspension manufacturing/freeze mode

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Ride level control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Body control module	Tire pressure sensor replacement
		Body control module	Tire pressure monitor confirmation application
		Body control module	Battery replacement
		Body control module	Sunroof calibration
		Body control module	Valet mode reset
		Body control module	Steering column calibration
		Heating ventilation and air conditioning control module	Evaporator and heater test
		Heating ventilation and air conditioning control module	Actuators end stop detection
		Heating ventilation and air conditioning control module	Stepper motor initialisation
		Steering angle sensor module	Steering wheel angle sensor calibration
		Parking brake control module	Drive the parking brake to the mounting position
		Parking brake control module	Drive the parking brake to the latching position
		Parking brake control module	Longitudinal accelerometer sensor calibration
		Parking brake control module	Parking brake unjam procedure
		Auxiliary heater control module	Auxiliary heater priming routine
		Driver's door module	Driver's door window glass calibration
		Driver's seat module	Driver's seat calibration
		Driver's seat module	Seat entry/exit enable
		Passenger's door module	Passenger's door window glass calibration
		Rear differential control module	Control module calibration
		Restraints occupant classification system module	Seat cushion replacement
		Headlamp Control Module	Headlamp control module system calibration
		Supplemental Inflatable Restraint System	Restraints build mode
		Instrument cluster control module	Service interval reset
		Ride level control module	Air suspension height calibration
		Ride level control module	Air suspension deflation
		Ride level control module	Air suspension enable
		Ride level control module	Set/un - set air suspension manufacturing/freeze mode
		Ride level control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Body control module	Tire pressure sensor replacement
		Body control module	Tire pressure monitor confirmation application
		Body control module	Tire pressure monitor sensor identification display
		Body control module	Sunroof calibration
		Body control module	Tire pressure monitoring tire pressure sensor test
		Steering angle sensor module	Steering wheel angle sensor calibration
		Parking brake control module	Drive the parking brake to the mounting position
		Parking brake control module	Drive the parking brake to the latching position
		Parking brake control module	Longitudinal accelerometer sensor calibration
		Parking brake control module	Parking brake unjam procedure
		Auxiliary heater control module	Auxiliary heater fuel delivery test
		Transfer case control module	Absolute position sensor replacement
		Restraints occupant classification system module	Seats - Seat cover replacement
		Headlamp Control Module	Headlamp control module system calibration
		Keyless vehicle module	Check passive keys enabled
		Audio amplifier module	DVD region counter reset
		Image processing module B	Camera auto learn routine

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
2012-2013	Powertrain control module	Oil service counter reset	
		Rest of world - Service interval options	
		Diesel particulate filter dynamic regeneration	
		Diesel particulate filter replacement	
		Throttle valve actuator	
		Fuel prime routine	
		Anti-lock Braking System	Brake bleed
		Anti-lock Braking System	Yaw Rate sensor calibration
		Instrument cluster control module	Service interval reset
		Ride level control module	Air suspension height calibration
		Ride level control module	Air suspension deflation
		Ride level control module	Air suspension enable
		Ride level control module	Set/un - set air suspension manufacturing/freeze mode
		Ride level control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Body control module	Tire pressure sensor replacement
		Body control module	Tire pressure monitor sensor identification display
		Body control module	Tire pressure monitor confirmation application
		Body control module	Battery replacement
		Body control module	Sunroof calibration
		Heating ventilation and air conditioning control module	Evaporator and heater test
		Heating ventilation and air conditioning control module	Actuators end stop detection
		Heating ventilation and air conditioning control module	Stepper motor initialisation
		Steering angle sensor module	Steering wheel angle sensor calibration
		Parking brake control module	Drive the parking brake to the mounting position
		Parking brake control module	Drive the parking brake to the latching position
		Parking brake control module	Longitudinal accelerometer sensor calibration
		Parking brake control module	Parking brake unjam procedure
		Auxiliary heater control module	Auxiliary heater priming routine
		Driver's door module	Driver's door window glass calibration
		Driver's seat module	Driver's seat calibration
		Driver's seat module	Seat entry/exit enable
		Passenger's door module	Passenger's door window glass calibration
		Rear differential control module	Control module calibration
2012-2013	Restraints occupant classification system module	Restraints build mode	Seat cushion replacement
		Headlamp Control Module	Headlamp control module system calibration
		Supplemental Inflatable Restraint System	Restraints build mode
		Instrument cluster control module	Service interval reset
		Ride level control module	Air suspension height calibration
		Ride level control module	Air suspension deflation
		Ride level control module	Air suspension enable
		Ride level control module	Set/un - set air suspension manufacturing/freeze mode
		Ride level control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Body control module	Tire pressure sensor replacement
		Body control module	Tire pressure monitor confirmation application
		Body control module	Tire pressure monitor sensor identification display
		Body control module	Sunroof calibration
		Body control module	Tire pressure monitoring tire pressure sensor test

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Steering angle sensor module	Steering wheel angle sensor calibration
		Parking brake control module	Drive the parking brake to the mounting position
		Parking brake control module	Drive the parking brake to the latching position
		Parking brake control module	Longitudinal accelerometer sensor calibration
		Parking brake control module	Parking brake unjam procedure
		Auxiliary heater control module	Auxiliary heater fuel delivery test
		Transfer case control module	Absolute position sensor replacement
		Restraints occupant classification system module	Seats - Seat cover replacement
		Headlamp Control Module	Headlamp control module system calibration
		Keyless vehicle module	Check passive keys enabled
		Audio amplifier module	DVD region counter reset
		Image processing module B	Camera auto learn routine
2014 - 2015		Powertrain control module	Diesel fueling adaption re - initialization
		Powertrain control module	Diesel particulate filter differential pressure sensor replacement
		Powertrain control module	Diesel particulate filter replacement
		Powertrain control module	Oil service counter reset
		Powertrain control module	Exhaust gas recirculation valve
		Powertrain control module	Throttle valve actuator
		Powertrain control module	Oxygen sensor
		Powertrain control module	Oxidation catalyst
		Powertrain control module	Reset water in fuel detection
		Powertrain control module	Turbine shut - off valve
		Powertrain control module	Rest of world - Service interval options
		Powertrain control module	Fuel Lift Pump
		Powertrain control module	Adaption clear
		Powertrain control module	Fuel prime routine
		Powertrain control module	Adaption clear
		Powertrain control module	Pilot correction learning
		Anti-lock Braking System	Yaw Rate sensor calibration
		Supplemental Inflatable Restraint System	Restraints build mode
		Instrument cluster control module	Vehicle reset
		Ride level control module	Air suspension deflation
		Ride level control module	Air suspension enable
		Ride level control module	Set/un - set air suspension manufacturing/freeze mode
		Ride level control module	Set/un - set air suspension tight tolerance mode (headlamp setting)
		Ride level control module	Set/un - set air suspension geometry set - up
		Body control module	Sunroof calibration
		Body control module	Tire pressure sensor replacement
		Body control module	Valet mode reset
		Body control module	Steering column calibration
		Body control module	Tire pressure monitor sensor identification display
		Body control module	Transportation mode
		Body control module	Verify Keys
		Heating ventilation and air conditioning control module	Actuators end stop detection
		Heating ventilation and air conditioning control module	Stepper motor initialisation
		Steering angle sensor module	Steering wheel angle sensor calibration
		Parking brake control module	Drive the parking brake to the mounting position
		Parking brake control module	Drive the parking brake to the latching position
		Parking brake control module	Parking brake unjam procedure

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Parking brake control module	Longitudinal accelerometer calibration
		Auxiliary heater control module	Auxiliary heater priming routine
		Gateway module	Battery replacement
		Gateway module	Quiescent current control module internal check
		Driver's seat module	Driver's seat calibration
		Driver's seat module	Seat entry/exit enable
		Rear differential control module	Control module calibration
		Restraints occupant classification system module	Seats - Seat cover replacement
		Headlamp Control Module	Headlamp control module system calibration
		Keyless vehicle module	Check all antennas
		Keyless vehicle module	Check passive keys enabled
		Keyless vehicle module	Recover programmed keys
		Audio amplifier module	Calibrate dynamic volume control
		Image processing module B	Camera auto learn routine
Range Rover Evoque	2012 - 2013	Powertrain control module	Fuel prime routine
		Powertrain control module	Throttle valve actuator
		Powertrain control module	Injector valve test
		Powertrain control module	Purge valve self test
		Powertrain control module	Adaptive fuel trim display
		Powertrain control module	Oil service counter reset
		Powertrain control module	Diesel particulate filter dynamic regeneration
		Powertrain control module	Diesel particulate filter replacement
		Powertrain control module	Injector replacement
		Powertrain control module	Idle speed - Adjustment
		Powertrain control module	Display injector correction factors
		Powertrain control module	Service interval reset
		Powertrain control module	Adaption clear
		Transmission control module	Transmission control module oil counter reset
		Transmission control module	Adaption clear
		Anti-lock Braking System	Steering wheel angle sensor calibration
		Anti-lock Braking System	Longitudinal accelerometer sensor calibration
		Anti-lock Braking System	Lateral accelerometer calibration
		Anti-lock Braking System	Pressure sensor calibration
		Anti-lock Braking System	Roll rate sensor calibration
		Supplemental Inflatable Restraint System	Restraints build mode
		Instrument cluster control module	Service interval reset
		Instrument cluster control module	Vehicle reset
		Body control module	Tire pressure sensor replacement
		Body control module	Tire pressure monitor confirmation application
		Body control module	Battery replacement
		Body control module	Tire pressure monitor sensor identification display
		Body control module	Valet mode reset
		Body control module	Tire pressure monitoring tire pressure sensor test
		Heating ventilation and air conditioning control module	Stepper motor initialisation
		Heating ventilation and air conditioning control module	Actuators end stop detection
		Heating ventilation and air conditioning control module	Re - program all stepper motors
		Parking brake control module	Parking brake pad replacement - Release to service position
		Parking brake control module	Parking brake pad replacement - Exit maintenance mode application
		Parking brake control module	Parking brake activation

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Parking brake control module	Longitudinal accelerometer calibration
		Parking brake control module	Brake caliper replacement assembly test
		Auxiliary heater control module	Auxiliary heater priming routine
		Auxiliary heater control module	Auxiliary heater activation test
		Driver's door module	Driver's door window glass calibration
		Adaptive damping control module	Air suspension height calibration
		Restraints occupant classification system module	Seats - Seat cover replacement
		Headlamp Control Module	Headlamp control module system calibration
		Keyless vehicle module	Check all antennas
		Keyless vehicle module	Recover programmed keys
		Audio amplifier module	DVD region counter reset
		Audio amplifier module	Calibrate dynamic volume control
		Rear gate/trunk module	Tailgate/trunk calibration
		Image processing module B	Camera auto learn routine
		Audio front control module	Navigation reset
		Side object detection control module - Left	Side object detection mode history
		Keyless vehicle module	Check passive keys enabled
2014 - 2015		Powertrain control module	Fuel prime routine
		Powertrain control module	Throttle valve actuator replacement
		Powertrain control module	Reset water in fuel detection
		Powertrain control module	Exhaust gas recirculation valve
		Powertrain control module	Throttle valve actuator
		Powertrain control module	Oxygen sensor
		Powertrain control module	Oxidation catalyst
		Powertrain control module	Injector replacement
		Powertrain control module	Diesel particulate filter differential pressure sensor replacement
		Powertrain control module	Diesel fueling adaption re - initialization
		Powertrain control module	Fuel Lift Pump
		Powertrain control module	Diesel particulate filter replacement
		Powertrain control module	Idle speed - Adjustment
		Powertrain control module	Turbine shut - off valve
		Powertrain control module	Oil change reset
		Anti-lock Braking System	Steering wheel angle sensor calibration
		Anti-lock Braking System	Pressure sensor calibration
		Supplemental Inflatable Restraint System	Restraints build mode
		Ride level control module	Air suspension height calibration
		Body control module	Tire pressure sensor replacement
		Body control module	Valet mode reset
		Body control module	Tire pressure monitor sensor identification display
		Body control module	Fuel pump supply - Enable/disable
		Body control module	Transportation mode
		Body control module	Roof blind calibration
		Body control module	Verify Keys
		Heating ventilation and air conditioning control module	Actuators end stop detection
		Heating ventilation and air conditioning control module	Stepper motor initialisation
		Heating ventilation and air conditioning control module	Re - program all stepper motors
		Heating ventilation and air conditioning control module	Seat climate control module calibration
		Heating ventilation and air conditioning control module	Run in air conditioning compressor

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Heating ventilation and air conditioning control module	Climate seat unlock
		Heating ventilation and air conditioning control module	Reset air conditioning compressor
		Parking brake control module	Parking brake pad replacement - Release to service position
		Parking brake control module	Parking brake pad replacement - Exit maintenance mode application
		Parking brake control module	Parking brake activation
		Parking brake control module	Longitudinal accelerometer calibration
		Passenger's seat module	Power steering soft - lock end stops reset routine
		Auxiliary heater control module	Auxiliary heater priming routine
		Gateway module	Battery replacement
		Gateway module	Quiescent current control module internal check
		Driver's door module	Driver's door window glass calibration
		Driver's seat module	Driver's seat calibration
		Passenger's door module	Passenger's door window glass calibration
		Adaptive damping control module	Air suspension height calibration
		Speed control module	Speed control alignment
		Restraints occupant classification system module	Seats - Seat cover replacement
		Headlamp Control Module	Headlamp control module system calibration
		Keyless vehicle module	Check all antennas
		Keyless vehicle module	Check passive keys enabled
		Keyless vehicle module	Recover programmed keys
		Audio amplifier module	Calibrate dynamic volume control
		Rear gate/trunk module	Tailgate/trunk calibration
		Image processing module B	Camera auto learn routine
		Anti-lock Braking System	Brake Bleeding
		Anti-lock Braking System	ECU Replacement
Freelander	1997 - 2001	Engine(KV6 (NAS Only))	Immobilisation Learn
		Engine(KV6 (NAS Only))	Reset Adaptons
		Engine(KV6 (NAS Only))	Idle Speed Adjust
		Engine(KV6 (NAS Only))	Programming History
		Transmission	ECU Checks & Renewal
		Anti-lock Braking System	ECU Renewal
		Anti-lock Braking System	Brake Bleeding
		Anti-lock Braking System	Calibrate 'G' Sensor
		Anti-lock Braking System	Vac Fill Valve Sequence
		Airbag	Display ECU Data
		Airbag	Renew ECU
		Alarms/Security	ECU Renewal
		Alarms/Security	Synchronise Immobilisation
		Alarms/Security	Identify Key
		Alarms/Security	Key Store
		Alarms/Security	Key Programming
		Body Control	ECU Renewal
		Body Control	Plip Programming
		Body Control	Volumetric Settings
		Cruise Control	Tune Information
		Cruise Control	Last Shut Off
		Fuel Burning Heater	Set CO2 Level
		Fuel Burning Heater	Prime System
		Instrumentation	ECU Renewal
		Instrumentation	NAS AAT Information

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Instrumentation	NAS/Canada OAT Information
		Transmission	ECU Checks & Renewal
		Powertrain control module	Adaption clear
		Powertrain control module	Fuel prime routine
		Powertrain control module	Throttle valve actuator replacement
LR2	2007 - 2010	Powertrain control module	Boost pressure actuator replacement
		Powertrain control module	Diesel particulate filter dynamic regeneration
		Powertrain control module	Injector replacement
		Powertrain control module	Diesel fueling adaption re - initialization
		Powertrain control module	Exhaust gas recirculation replacement
		Powertrain control module	Diesel particulate filter differential pressure sensor replacement
		Powertrain control module	Diesel particulate filter air temperature sensor replacement
		Powertrain control module	Diesel particulate filter replacement
		Powertrain control module	Diesel lambda sensor replacement
		Powertrain control module	Oil service counter reset
		Powertrain control module	Idle speed - Adjustment
		Powertrain control module	Display injector correction factors
		Powertrain control module	Adaption clear
		Powertrain control module	Boost pressure actuator replacement
		Transmission control module	Adaption clear
		Transmission control module	Gear selector sensor calibration
		Anti-lock Braking System	Lateral accelerometer calibration
		Anti-lock Braking System	Longitudinal accelerometer sensor calibration
		Anti-lock Braking System	Pressure sensor calibration
		Anti-lock Braking System	Roll rate sensor calibration
		Anti-lock Braking System	Yaw Rate sensor calibration
		Supplemental Inflatable Restraint System	Restraints build mode
		Instrument cluster control module	Service interval reset
		Instrument cluster control module	Fuel consumption units
		Instrument cluster control module	Message centre display contrast
		Body control module	Sunroof calibration
		Body control module	Security - Keyfob remote functionality
		Body control module	Tire pressure sensor replacement
		Body control module	Tire pressure monitor confirmation application
		Body control module	Battery replacement
		Body control module	Transportation mode
		Body control module	Tire pressure monitor transmitter functionality
		Body control module	Crash status reset
		Heating ventilation and air conditioning control module	Humidity sensor replacement
		Heating ventilation and air conditioning control module	Seat heater module calibration
		Heating ventilation and air conditioning control module	Stepper motor replacement
		Auxiliary heater control module	Auxiliary heater activation test
		Auxiliary heater control module	Auxiliary heater fuel delivery test
		Driver's door module	Driver's door window glass calibration
		Driver's seat module	Driver's seat calibration
		Passenger's door module	Passenger's door window glass calibration
		Restraints occupant classification system module	Seats - Seat cover replacement
		Headlamp Control Module	Headlamp control module system calibration
		Powertrain control module	Diesel particulate filter dynamic regeneration

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
	2011 - 2012	Powertrain control module	Diesel particulate filter replacement
		Powertrain control module	Diesel fueling adaption re - initialization
		Powertrain control module	Diesel particulate filter differential pressure sensor replacement
		Powertrain control module	Injector replacement
		Powertrain control module	Exhaust gas recirculation valve
		Powertrain control module	Throttle valve actuator
		Powertrain control module	Oxygen sensor
		Powertrain control module	Oxidation catalyst
		Powertrain control module	Idle speed - Adjustment
		Powertrain control module	Adaption clear
		Powertrain control module	Throttle valve actuator
		Transmission control module	Gear selector sensor calibration
		Transmission control module	Adaption clear
		Anti-lock Braking System	Yaw Rate sensor calibration
		Anti-lock Braking System	Lateral accelerometer calibration
		Anti-lock Braking System	Longitudinal accelerometer sensor calibration
		Anti-lock Braking System	Pressure sensor calibration
		Anti-lock Braking System	Roll rate sensor calibration
		Supplemental Inflatable Restraint System	Restraints build mode
		Instrument cluster control module	Service interval reset
		Instrument cluster control module	Fuel consumption units
		Instrument cluster control module	Message centre display contrast
		Body control module	Sunroof calibration
		Body control module	Tire pressure sensor replacement
		Body control module	Tire pressure monitor confirmation application
		Body control module	Battery replacement
		Body control module	Security - Keyfob remote functionality
		Body control module	Crash status reset
		Heating ventilation and air conditioning control module	Humidity sensor replacement
		Heating ventilation and air conditioning control module	Seat heater module calibration
		Heating ventilation and air conditioning control module	Stepper motor replacement
		Auxiliary heater control module	Auxiliary heater priming routine
		Driver's door module	Driver's door window glass calibration
		Driver's seat module	Driver's seat calibration
		Passenger's door module	Passenger's door window glass calibration
		Headlamp Control Module	Headlamp control module system calibration
		Powertrain control module	Injector valve test
	2013 - 2014	Powertrain control module	Fuel Lift Pump
		Powertrain control module	Fuel prime routine
		Powertrain control module	Purge valve self test
		Powertrain control module	Service interval reset
		Powertrain control module	Throttle valve actuator replacement
		Powertrain control module	Diesel particulate filter dynamic regeneration
		Powertrain control module	Injector replacement
		Powertrain control module	Diesel particulate filter replacement
		Powertrain control module	Oil service counter reset
		Powertrain control module	Idle speed - Adjustment
		Powertrain control module	Display injector correction factors
		Powertrain control module	Diesel fueling adaption re - initialization
		Powertrain control module	Diesel particulate filter differential pressure sensor replacement

Vehicle Information		Supported Special Functions	
Model	Year	System	Supported
		Powertrain control module	Exhaust gas recirculation valve
		Powertrain control module	Oxygen sensor
		Powertrain control module	Oxidation catalyst
		Powertrain control module	Reset water in fuel detection
		Powertrain control module	Turbine shut - off valve
		Transmission control module	Transmission control module oil counter reset
		Transmission control module	Adaption clear
		Transmission control module	Gear selector sensor calibration
		Anti-lock Braking System	Steering wheel angle sensor calibration
		Anti-lock Braking System	Longitudinal accelerometer sensor calibration
		Anti-lock Braking System	Lateral accelerometer calibration
		Anti-lock Braking System	Pressure sensor calibration
		Anti-lock Braking System	Roll rate sensor calibration
		Supplemental Inflatable Restraint System	Restraints build mode
		Instrument cluster control module	Service interval reset
		Instrument cluster control module	Vehicle reset
		Body control module	Tire pressure sensor replacement
		Body control module	Tire pressure monitor confirmation application
		Body control module	Tire pressure monitor sensor identification display
		Body control module	Valet mode reset
		Body control module	Battery replacement
		Body control module	Sunroof calibration
		Body control module	Fuel pump supply - Enable/disable
		Body control module	Verify Keys
		Heating ventilation and air conditioning control module	Stepper motor initialisation
		Heating ventilation and air conditioning control module	Actuators end stop detection
		Heating ventilation and air conditioning control module	Re - program all stepper motors
		Parking brake control module	Parking brake pad replacement - Release to service position
		Parking brake control module	Parking brake pad replacement - Exit maintenance mode application
		Parking brake control module	Longitudinal accelerometer calibration
		Parking brake control module	Brake caliper replacement assembly test
		Parking brake control module	Parking brake activation
		Auxiliary heater control module	Auxiliary heater priming routine
		Auxiliary heater control module	Auxiliary heater activation test
		Driver's door module	Driver's door window glass calibration
		Driver's seat module	Driver's seat calibration
		Passenger's door module	Passenger's door window glass calibration
		Restraints occupant classification system module	Seats - Seat cover replacement
		Headlamp Control Module	Headlamp control module system calibration
		Keyless vehicle module	Check all antennas
		Keyless vehicle module	Check passive keys enabled
		Audio amplifier module	DVD region counter reset
		Audio amplifier module	Calibrate dynamic volume control
		Audio front control module	Navigation reset
		Alarms/Security	Plip Programming
		Anti-lock Braking System	ECU Renewal
		Alarms/Security	Plip Programming